


## Buum® roll holder assembly instructions

- **Required tools - Allen key SW 5 and possibly a hammer**
1. Connect the side parts items 3 and 4 with the lower cross connection item 2
  2. Connect the struts item 5 with the upper cross connection item 1
  3. Connect the upper cross connection item 1 with the two side parts items 3 and 4
  4. Connect the struts item 5 with the lower cross connection item 2
  5. Insert the tube item 6 into the cardboard core of a wiper roll and
  6. Place these in the receptacles on the side parts Item 3 and Item 4

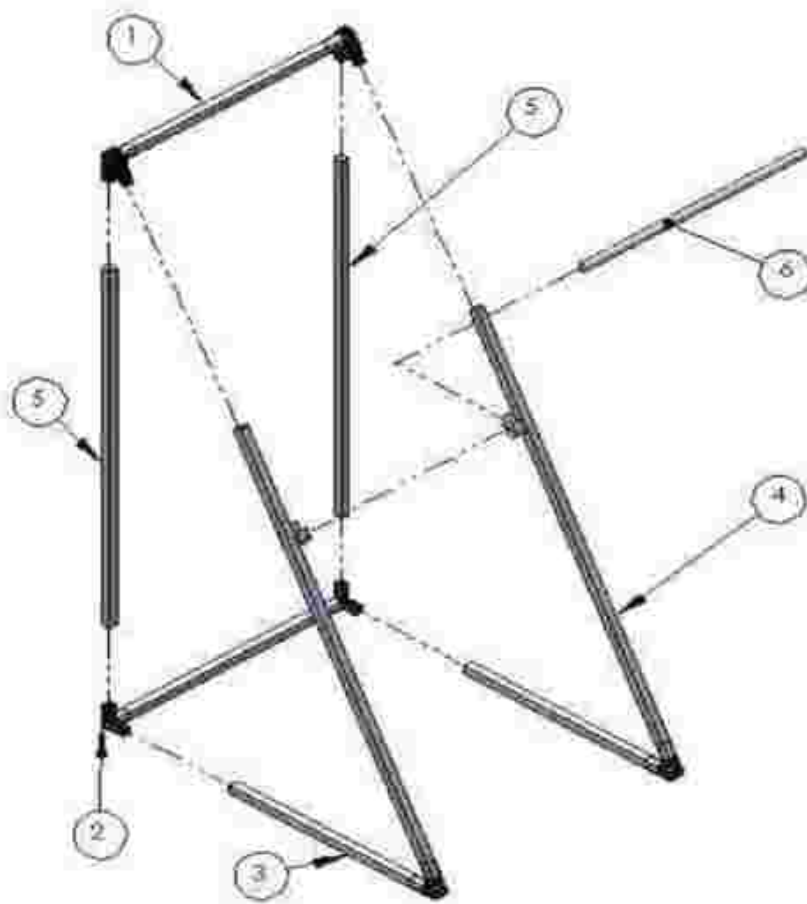

Buum GmbH & Co.KG  
Hamburger Straße 27 D  
D- 22952 Lütjensee  
Phone: +49 (0) 4154 / 7351